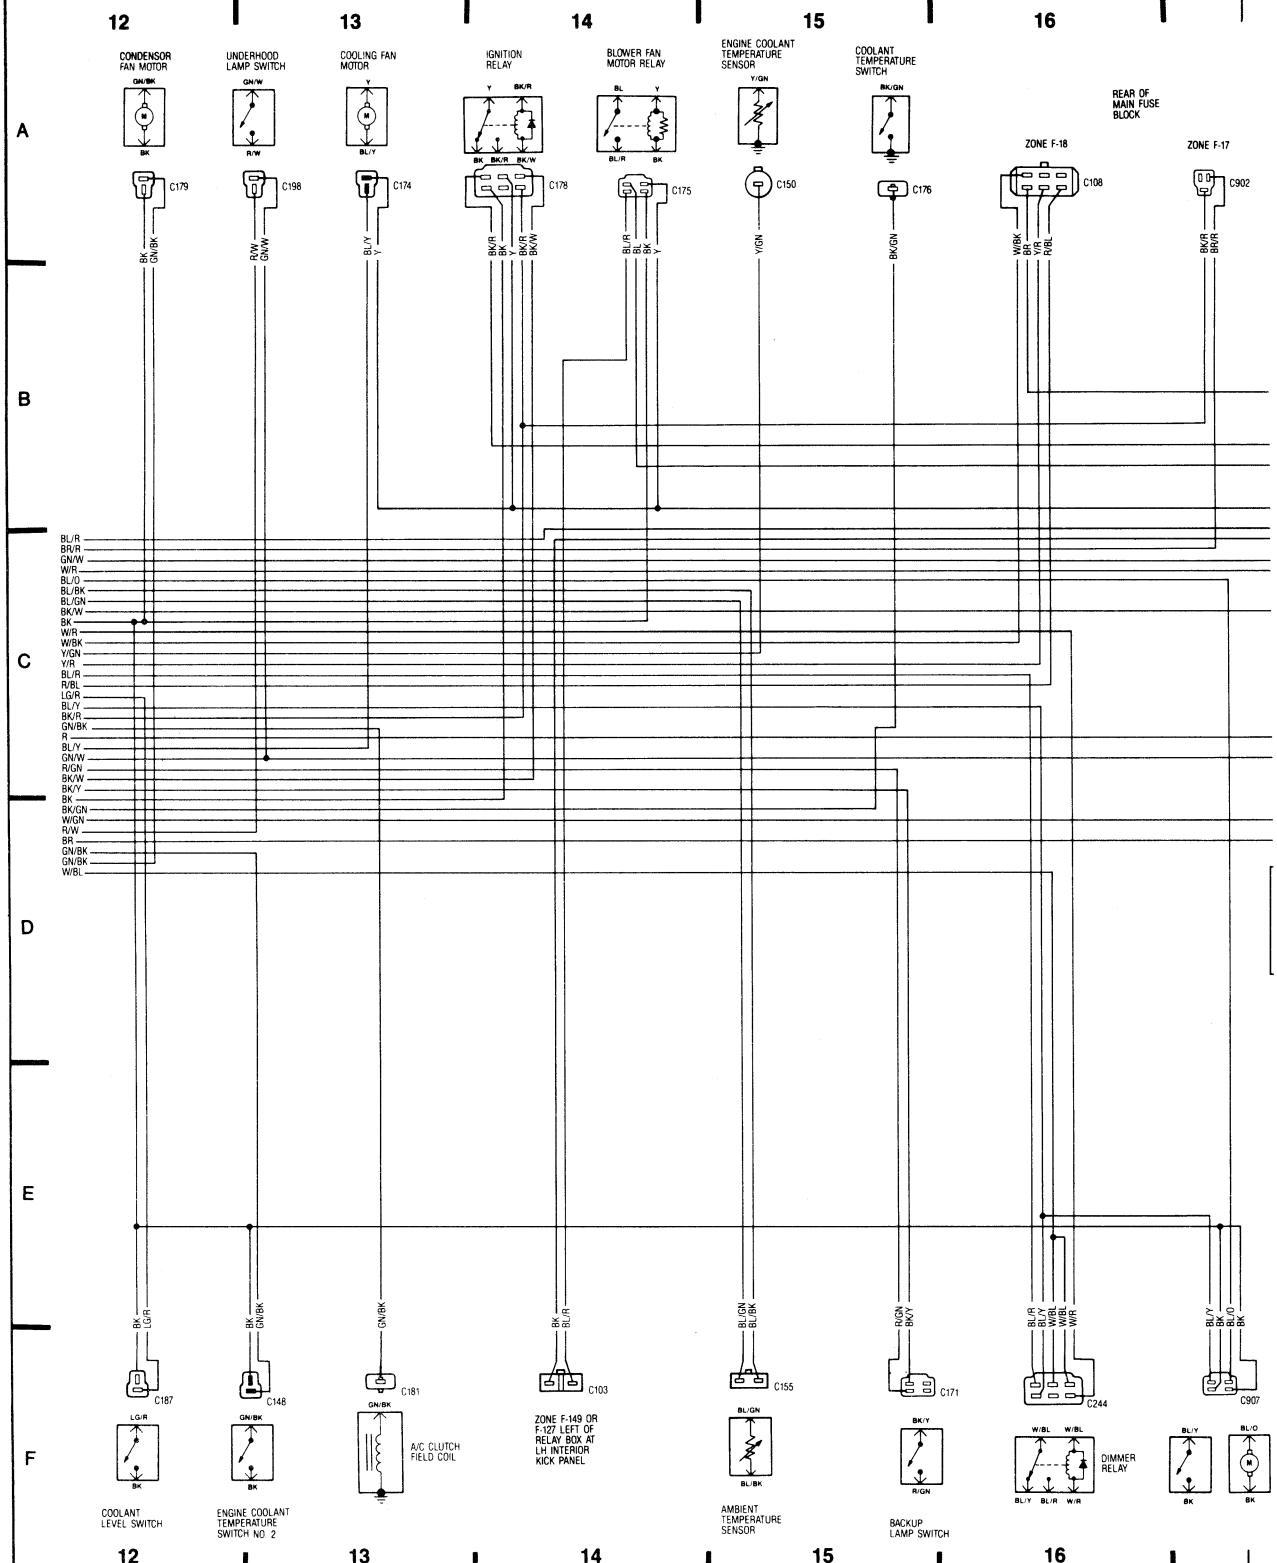
12
13
14
15
16
A
B
C
D
E
F
CONDENSOR FAN MOTOR
UNDERHOOD LAMP SWITCH
COOLING FAN MOTOR
IGNITION RELAY
BLOWER FAN MOTOR RELAY
ENGINE COOLANT TEMPERATURE SENSOR
COOLANT TEMPERATURE SWITCH
REAR OF MAIN FUSE BLOCK
ZONE F-18
ZONE F-17
C179
C198
C174
C178
C175
C150
C176
C108
C902
C187
C148
C181
C103
C155
C171
C244
C907
ZONE F-149 OR F-127 LEFT OF RELAY BOX AT LH INTERIOR KICK PANEL
A/C CLUTCH FIELD COIL
DIMMER RELAY
COOLANT LEVEL SWITCH
ENGINE COOLANT TEMPERATURE SWITCH NO 2
AMBIENT TEMPERATURE SENSOR
BACKUP LAMP SWITCH
FRAME 3 OF 64
12136-89Z